 


KRECO
Smart Eyewear MG20

智能音乐眼镜



产品规格

镜架颜色：亚黑/亮黑，亚灰/亮黑，亚灰/亮白
镜片颜色：透明防蓝光镜片
镜架材质：尼龙
前框宽度：145mm
镜腿长度：160mm
充电参数：5V==100mA
蓝牙协议：V5.3
充电时间：约 1 小时
使用时间：6 – 8小时
待机时间：约 180 小时
电池容量：110mAh x 2
声道：双喇叭，立体声
镜片材质：聚碳酸酯
镜片工艺：防蓝光，镀蓝膜
有效距离：≥15m
喇叭直径：1506mm 喇叭功率：800mW 阻抗：8Ω
麦克风灵敏度：-38dB±6dB 信噪比：≥101DB
失真度：≤5%
频率响应：20Hz-20KHz

物品清单

智能眼镜 x1
充电线 x 1
眼镜布 x 1
说明书 x 1

产品使用简介

- (1)除说明书有特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
(2)请勿将产品放入水或其他任何液体中，此产品为 ipx4级防水防尘。
(3)如果有任何液体不小心进入产品内时，请立即断开连接并移开此产品，继续使用有可能会一起起火或触电。
(4)为避免触电，请在安装或卸载产品时，确保手上没有沾水。
(5)请勿将此产品放置于热源附近或直接暴露在火源附近。
(6)请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

产品操作说明

- 1.开机：
分别长按两个镜腿的多功能键3秒开机,两个镜腿开机后会自动配对左右镜腿
2.关机：
长按任何一个镜腿的长按多功能键6秒,两个镜腿同时关机
3.配对与连接
打开准备配对的蓝牙设备的蓝牙设置选项,进入选项,找到耳机的蓝牙配对名“MG20”,点击配对名进行配对。
4.播放音乐
上一曲：短按多功能键3次
下一曲：短按多功能键2次
暂停/ 播放：短按多功能键1次
5.电话免提
来电时，接听：短按多功能键1次
来电时，拒接：短按多功能键2次
结束通话挂断：在接通电话状态下，短按多功能键1次
结束当前通话，接听第三方电话：短按多功能键1次

保持当前通话，接听第三方电话：短按多功能键2次
重播：连续三击按键，即可拨打最后一个通话记录
6.语音助手
待机状态下,双击多功能按键,进入语音系统
播放音乐时,需单击一次多功能按键,暂停播放,再双击两次进入语音功能。
7.指示灯显示
开机：指示灯呈蓝灯闪烁。
关机：指示灯呈红灯闪烁1秒后熄灭。
蓝牙配对成功：指示灯熄灭。
蓝牙断连：指示灯呈蓝灯闪烁。
充电：充电过程中,耳机指示灯呈红灯常亮;当充满电后,指示灯熄灭。
8.脱机照相功能等
打开相机状态下: 长按1秒即可拍照。
9.切换语言
长按眼镜按钮3秒开机，断开手机蓝牙或其他蓝牙设备，看到镜腿内侧有蓝灯闪烁，连续短按多功能键4次，即可切换成功。

产品中有有害物质名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○
本表格依据SJ/T11364的规定编制。 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。 X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。 表单标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。						
印刷电路板组件*: 包括印刷电路板及其零部件, 电子元器件等, 根据产品类型不同, 您所购买的产品可能不会含有以上所有部件						
	在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。					

保修声明

免责声明
本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。
保修声明
就本文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量瑕疵发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。
如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。
以上保证不适用于下列情况:
1.超过三包有效期的;
2.涂改保修卡、产品编码与产品本体不符;
3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;


- 4.因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
5.拉链、塔扣因受力过大而损坏;
6.因承载过重造成的脱线或撕裂;
7.任何因尖锐物体造成的损坏;
8.有烧损或水浸迹象的产品;
9.因擅自拆改导致的损坏;
10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。
11.如产品原有标识标签被更改或损毁, 本保证将失效。产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线: 400-0606-138

KRECO
Smart Eyewear MG20

USER MANUAL

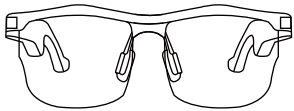

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Product specification

Frame color: elegant black/bright black, elegant grey/bright black, elegant grey/bright white
Lens color: transparent anti blue light lenses
Frame material: nylon
Front frame width: 145mm
Frame Leg Length: 160mm
Charging parameters: 5V==100mA
Bluetooth protocol: V5.3
Charging time: about 1 hours
Use time: 6 – 8 hours
Standby time: about 180 hours
Battery capacity: 110mAh x 2
Track: dual speaker stereo
Lens material: polycarbonate
Lens process: anti-blue light, blue film plating ultraviolet rays
Effective distance: ≥15m
Horn diameter: 1506 mm
Horn power: 800mW
Impedance: 8Ω
Microphone sensitivity: -38dB±6dB
SNR: ≥101DB
Distortion: ≤5%
Frequency response: 20Hz-20KHz

Item listing

Smart Glasses x 1
Charging line x 1
Glasses cloth x 1

Specifcations x 1

Product Introduction

- (1) Do not attempt to disassemble or replace any parts in the product unless the operation method is specially indicated in the manual.
(2) Do not put the product into water or any other liquid. This product is IPX4 waterproof and dustproof.
(3) If any liquid accidentally enters the product, please disconnect the connection and remove the product immediately. If you continue to use the product, it may cause re or electric shock.
(4) In order to avoid electric shock, please ensure that your hands are not wet when installing or unloading the product.
(5) Do not place the product near a heat source or directly expose it to the re source.
(6) Do not place the product in the environment with strong electromagnetic force, otherwise it will cause product failure

Product Operation Instructions

1. The boot
Long press the multifunction button for 3 seconds to power up

- 2.To turn it off
Long press the multifunction button for 6 seconds to shut down
3. Match and Connect
Open the Bluetooth setting option of the Bluetooth device to be paired, enter the option, find the Bluetooth pairing name of the headset "MG20", and click the pairing name to pair.
4.Play music
Last song: Short press the multifunction button
3 times Next: Short press the multifunction button 2 times
Pause/Play: Short press the multifunction button once
5.Hands-free
Answer the call: press the multi-function button once
Reject when calling: press the multifunction button twice
End call and hang up: press the multifunction button once when the call is connected
Hold the current call to receive a third party call: short press the multifunction button twice
Replay: Press the button three times in succession to dial the last call record
6.Voice assistants
In standby state, double-click the multi-function button to enter the voice system

When playing music, you need to click the multi-function button once to pause the play, and then double click twice to enter the voice function
7.Indicator light display
Power on: The indicator light is ashing blue.
Shutdown: The indicator light ashes red for 1 second and then goes o .
Bluetooth pairing is successful: indicator light goes o .
Bluetooth disconnection: The indicator light is ashing blue.
Charging: During the charging process, the headset indicator light is always red; When fully charged, the indicator light goes off.
8. Offline camera function, etc.
When the camera is turned on, long press for 1 second to take a picture.
9. Switching languages
Press and hold the glasses button for 3 seconds to power up, disconnect the Bluetooth or other Bluetooth devices, and see a blue light flashing on the inside of the mirror legs. Press and hold the multifunction button 4 times continuously to switch successfully.

Name and content of harmful substances in the product

Part Name	Harmful substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Shell and other small structural parts	○	○	○	○	○	○
This form is prepared in accordance with SJ/T11364. ○: Denotes that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T26572. X: Denotes that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T26572. The parts marked "X" on the form cannot be replaced by harmful substances due to the limitation of the global technological development level.						
Printed circuit board components *: including printed circuit board and its components, electronic components, etc., depending on the product model, the product you buy may not contain all of the above components						
	The electronic and electrical products sold in the territory of the People's Republic of China must be marked with this logo, the number in the logo represents the product's environmental protection service life under the normal use state.					

The warranty statement

Disclaimer:
This user manual does not contain any warranty, position or other implication. The products, specifications and information mentioned in this user manual are for reference only. The content will be updated on the website from time to time without prior notice.
Warranty Statement:
With respect to the products attached to this document, the following warranties are made: if the products are damaged due to quality defects under normal use during the twelve (12) months from the date of purchase (the "Warranty Period"), they will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge. After the repair or replacement of the product, the remaining warranty period (the shortest not less than 30 days) will continue to enjoy the warranty. The purchase date shall be the date of the sales invoice. If the purchase date cannot be determined, the warranty period shall be calculated for thirteen (13) months from the date of manufacture of the Product.
If you apply for warranty, please call the product service hotline first and execute according to our instructions. When applying for the warranty, you need to provide a valid sales invoice that is accurate, complete and clearly filled out.

The above warranty does not apply to:
1.Exceeded the validity period of three guarantees;
2.The warranty card and product code are not consistent with the product itself;
3.Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage;
4.Failure or damage caused by force majeure (such as earthquake, war, re, etc.) or accident;
5.The zipper and tower buckle are damaged due to excessive force;
6.Outline or tear caused by heavy load;
7.Any damage caused by sharp objects;
8.Products with signs of burning or flooding;
9.Damage caused by unauthorized demolition and modification;
10.Aging, decolorization, wear, rupture and other wear and tear occurred during normal use of the product.
11.This warranty will be invalid if the original identification label of the product is changed or damaged. The completeness and good appearance of the products and the accompanying materials are not guaranteed. You should inspect the products on the spot when receiving them and raise objections for any inconsistencies.
The above warranties are all that we make with respect to our products, and only apply within the territory of mainland China. Nothing in this document shall affect consumer rights which cannot be excluded or limited by law
Service supervision hotline: 400-0606-138