



使用说明书
Smart audio glasses

产品参数、特点


镜架颜色	黑色	配对名称	Audio eyewear	镜架材质	树脂
传输距离	10米	蓝牙协议	Bluetooth 5.0	电池容量	110mAh
充电时间	1-2小时	使用时间	5小时	待机时间	200小时(蓝牙连接下)
包装清单	眼镜、充电线、眼镜袋(可做眼镜布)、说明书、保修卡				

- 兼容主流品牌手机和平板电脑等带有蓝牙的设备。
- 左右双喇叭，定向播放，真正的立体声音效。
- 支持aptX、apX-HD音频解码技术，达到CD级音质

操作说明

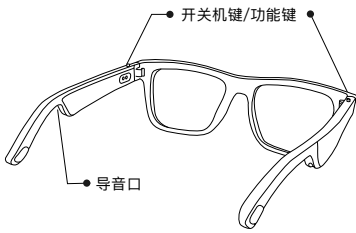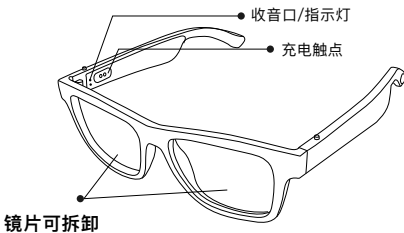


充电/开关机

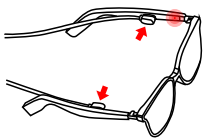

使用磁吸充电器贴住眼镜充电触点即可充电
在工作状态/关机状态下充电都无法开机

充电状态：指示灯显示红灯长亮，充满亮蓝灯。


电量低：指示灯显示红灯2秒闪一次，30S播报一次。

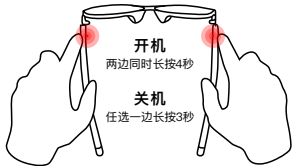

开机：同时长按左右腿功能键4秒，蓝灯亮1次，直到听到喇叭会提示音：（Power on)表示眼镜开机了。

关机：开机状态下，长按左/右腿功能键3秒，红灯亮3次，直到听到喇叭会提示音：（Power off)表示眼镜蓝牙关机。

蓝牙配对

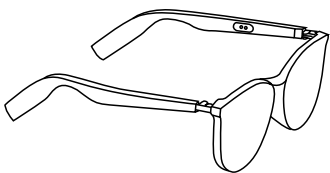

- 眼镜开机，打开手机蓝牙。
- 眼镜与手机配对成功。提示音：Connected
- 眼镜与手机断开连接。提示音：Disconnected
- 蓝牙配对名：KRE-R11

指示灯显示红蓝交替快闪表示等待蓝牙配对
蓝牙配对成功后蓝灯常亮，机器处于暂停状态

中英文切换：在眼镜蓝牙处在关闭的状态下，单击左/右腿功能键8次即可实现语音中英文切换。

使用状态



播放音乐状态

播放/暂停音乐：单击左/右腿功能键。

增加音量：双击左腿功能键增加一级音量，一直双击听到“滴滴滴”表示已经达到音量最高级。最高音量等级为5级，默认为3级。

减少音量：双击右腿功能键减少一级音量。一直双击后无声音，表示达到音量最低等级。

歌曲切换：三击左腿功能键为上一首，三击右腿功能键为下一首。

语音状态

待机或听音乐时，长按左/右腿功能键2秒（过程中喇叭会提示“滴滴滴”声音再按1秒），激活Sir语音助手。在激活的情况下再短按就关闭Sir语音助手。手机端会有提示声音出来。手机也会弹出语音的界面。

使用状态



通话状态

接听/挂断：短按左/右腿功能键。

拒接来电：在蓝牙连接情况下来电时，长按左/右腿功能键拒接来电。

音量调节：双击左腿功能键增加音量，双击右腿功能键减低音量。

接通第二个来电/切换第三方通话：单击左/右腿功能键1次。

挂断当前通话，接通第二个来电：单击左/右腿功能键1秒。

休眠状态/电量状态

- 当开机后，眼镜处在搜索状态，没有搜到手机蓝牙后，3分钟后会自动关机。
- 当眼镜处在暂停状态，蓝灯一直亮，3分钟后蓝灯灭，眼镜处在深度休眠状态。
- 当电池容量低于电池总容量15%时。红灯会闪烁表明电量低。
- 当电池容量低于电池总容量5%时。系统会听到提示音“请给机器充电”。

注意事项

- ◆请首次使用请将本产品充满电。
- ◆如果产品长期（超过两周）不充电，使用前请对其充电。
- ◆较脏的镜片不要直接擦拭，应先镜片打湿，再用眼镜布擦干。尽量使用绒面且吸水性较强眼镜布轻抹干净，不要太用力，朝同一个方向擦拭，不可来回擦拭，也不要直接在镜片上转圈转。
- ◆请勿以任何理由拆除或维修改装本产品，否则可能会导致起火，电子击穿甚至彻底损坏本产品。
- ◆请勿将设备置于温度过低或过高(0℃以下或45℃以上)环境下。
- ◆请勿将产品浸泡在液体里。
- ◆不能将眼镜放在阳光下长时间暴晒，或者容易变形、老化、折断。
- ◆请勿将充电线磁吸靠近金属物件，防止磁吸金属物件引起短路危险。
- ◆如充电完毕，请断开充电器与本设备的连接，需拔掉充电器，连续充电时间请勿超过12小时。
- ◆请不要将旧电池仍旧生活垃圾中进行处理，若电池处置不但可能会导致电池起火或爆炸，请遵守当地规定处理本产品，电池及其他附件。
- ◆电池禁止拆卸，撞击，挤压或投入火中，若出现严重膨胀，请勿继续使用。
- ◆若电池出现严重膨胀，请勿继续使用。
- ◆请勿自行维修本产品

I n s t r u c t i o n s



Smart audio glasses

Product parameters


Frame color	blank	Pairing name	Audio eyewear	Frame material	resin
Transmission distance	10m	Bluetooth protocol	Bluetooth 5.0	Battery capacity	110mAh
Charging time	1-2 hours	Usage time	5hours	Standby time	200 hours
Packing list	Glasses, charging cable, glasses box, manual, warranty card				

- Compatible with Bluetooth devices such as mainstream brand mobile phones and panel computers.
- Left and right double speakers, directional playback, true stereo sound.

Button description

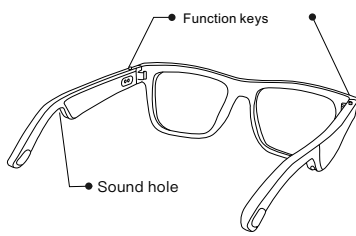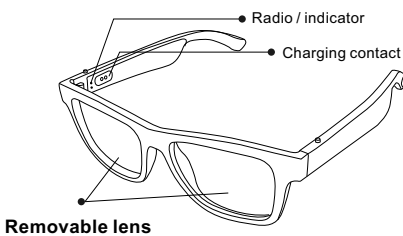


Charging/ OFF/ON

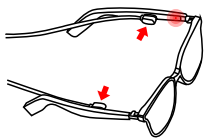

Use the magnetic suction charger attached to the charging contact

Charging status : The indicator light stays red, Full charge shows blue


Low power : The indicator light shows red light every 2 seconds and

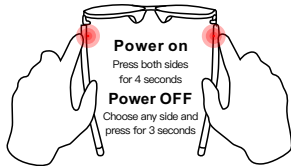

Power ON : Long press the left and right function keys for 4 seconds, the blue light will turn on once, until you hear the sound of the speaker: (Power on) means that the eyewear is turned on.

Power OFF : In the state of play, pause, call, etc., choose the left/right function keys to press and hold for 3 seconds, the red light will be on for 3 times, until you hear the sound of speaker: (Power off) means that the eyewear is turned off through Bluetooth.

Bluetooth pairing

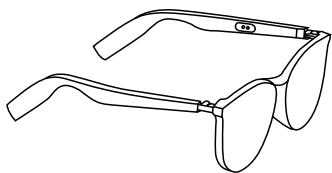

- Turn on the eyewear and turn on the Bluetooth of the mobile phone
- Bluetooth Matching Name: KRE-K10
- The eyewear and the phone are paired successfully. Prompt tone: connected
- The eyewear are disconnected from the phone. Prompt tone: Disconnected

Red and blue LED lights flash alternately and quickly waiting for Bluetooth pairing. When paired successfully, the blue LED light flashes once every 5 seconds.

language switch :

When bluetooth is OFF, click left/right leg function keys 8 times to switch between Chinese and English.

Using a state



Play music status

- Short press the left temple button or the right temple button (short press for 1 second) to play/pause music.
- Double-click the left temple button to increase the volume by one level. Double-click the left temple button again to increase the volume by two levels. Double-click the left temple button again to increase the volume by three levels. Double-click the left temple button again to increase the volume by four levels. Double-click the left temple button again to increase the volume by five levels to reach the highest level. The speaker makes a "di di" sound. The volume increase is divided into 5 levels. The default is level 3.
- Double-click the right temple button to decrease the volume by one level. Double-click the right temple button to decrease the volume by two levels. Then double-click the right temple button to reduce the volume by three levels. Double-click the right temple button again to reduce the volume by four levels.

Voice state

When it is standby or you are listening to music, long press the left/right temple button for 2 seconds (the speaker will prompt a "di di di" sound during the process and press for 1 second) to activate the Sir voice assistant. When activated, short press again to turn off the Sir voice assistant. There will be a prompt sound on the mobile phone. The phone will also pop up a voice interface.

Using a state



Call state

- When eyewear's Bluetooth is connected with phone, short press the left/right temple to answer/hang up the incoming call.
- When eyewear's Bluetooth is connected with phone, long press the left/right temple button to reject the incoming call.
- Adjust the volume during a call: double-click the left temple to decrease the volume. Double-click the right temple to increase the volume (do not support volume adjustment for the third party call).
- In the call state, short press the left/right temple button once to connect the second call/switch to three-way calling.
- In the call state, long press the left/right temple button once to hang up the current call and answer the second call.

Sleep state/power state

- When the glasses are in the search state after being turned on, they will automatically shut down after 3 minutes if the bluetooth of the mobile phone is not found.
- When the glasses are in a suspended state, the blue light is always on. After 3 minutes, the blue light is off and the glasses are in a deep sleep state.
- When the battery capacity is less than 5% of the total battery capacity, the system will release the prompt tone "Please charge the eyewear".
- When the battery capacity is less than 15% of the total battery capacity, the red light will flash to indicate that the battery is low.

Attentions

- Please fully charge the product for first use. If the product is not charged for a long time (more than two weeks), please charge it before use.
- Do not wipe the dirty lenses directly. The lenses should be moistened first, and then dried with lens cloth. Try to use a suede and strong absorbent glasses cloth to wipe it clean, do not wipe with too much force, wipe in the same direction, do not wipe back and forth, and do not rotate around the lens.
- Do not dismantle or repair or remodel this product for any reason, otherwise it may cause fire, electronic breakdown or even complete damage to this product.
- Do not place the device in an environment that is too hot or too cold (below 0°C or above 45°C).
- Do not soak the product in liquid.
- The eyewear cannot be exposed to the sun for a long time, otherwise they will be easily deformed, aged and broken.
- Do not put the magnetic suction of the charging cable close to metal objects to prevent the danger of short circuit caused by the magnetic suction of metal objects.
- If the charging is complete, please disconnect the charger from the device, unplug the charger, and do not charge more than 12 hours continuously.
- Please do not throw the old battery in the domestic garbage for disposal. Improper battery disposal may cause the battery to catch fire or explode, please follow local regulations when disposing of this product, battery and other accessories.